

Setup | Vital® Select E13/E15



For help or more information about Vital,
please call 800.224.9730 or visit help.vitalpos.com.



All trademarks contained herein are the sole and exclusive property of their respective owners. Any such use of those marks without the express written permission of their owner is strictly prohibited. TS8694






This package includes:

- Vital Select E13/E15
- S300 PIN pad (with connected USB cable)
- S300 PIN pad Power Cord
- Vital Select E13/E15 Power Cord
- 3 Ethernet Cables
- Paper Rolls

Thank you for choosing Vital. You should have already received a Vital Welcome email from no-reply@vitalpos.com providing a link to the Vital Back Office and your user credentials. If you cannot find this email, check your junk/spam folder or contact 800.224.9730 for help.

Follow the steps to install and set up your Vital Select E13/E15:

1. Connect to the Internet. Using an Ethernet cable, connect the Vital Select E13/E15 to your LAN.

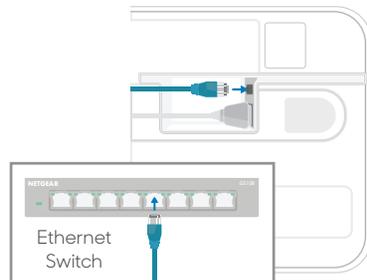


2. Connect the S300 PIN pad

- Connect the USB cable to the Vital Select E13/E15 USB port.



- Connect the red LAN cable connector into the LAN using an Ethernet cable.
- Connect the power cord to the cable connector (round, silver port).

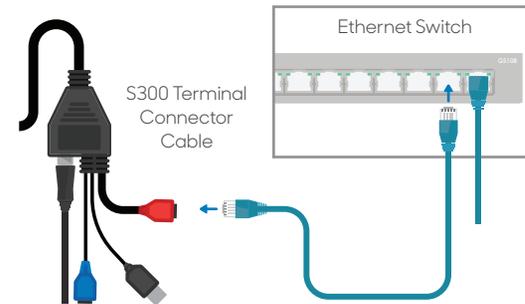

3. Power on the Vital Select E13/E15. Connect the Vital Select E13/E15 to an AC power source using the Vital Select E13/E15 power cord.
4. Log in and set your PIN. Use the credentials found in your Welcome email and follow the prompts to create a new password and PIN.
5. Complete the training on your E13/E15 register and start taking payments.

IMPORTANT: If you have not already scheduled an appointment to set up your Vital Back Office, please call 800.224.9730.